

DRAPER[®]

INSTRUCTIONS FOR 1300W 230V Multi Function Router Kit

Stock No.53113

Part No.MR1300

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY TO ENSURE THE SAFE AND EFFECTIVE USE OF THIS PRODUCT.



DRAPER[®]

GENERAL INFORMATION

These instructions accompanying the product are the original instructions. This document is part of the product, keep it for the life of the product passing it on to any subsequent holder of the product. Read all these instructions before assembling, operating or maintaining this product.

This manual has been compiled by Draper Tools describing the purpose for which the product has been designed, and contains all the necessary information to ensure its correct and safe use. By following all the general safety instructions contained in this manual, it will ensure both product and operator safety, together with longer life of the product itself.

All photographs and drawings in this manual are supplied by Draper Tools to help illustrate the operation of the product.

Whilst every effort has been made to ensure the accuracy of information contained in this manual, the Draper Tools policy of continuous improvement determines the right to make modifications without prior warning.

1. TITLE PAGE

1.1 INTRODUCTION:

USER MANUAL FOR:

1300W 230V MULTI FUNCTION ROUTER KIT

Stock no. 53113

Part no. MR1300

1.2 REVISIONS:

Date first published April 2014

As our user manuals are continually updated, users should make sure that they use the very latest version.

Downloads are available from: <http://www.drapertools.com/b2c/b2cmanuals.pgm>

DRAPER TOOLS LIMITED
HURSLEY ROAD
CHANDLER'S FORD
EASTLEIGH
HAMPSHIRE
SO53 1YF UK

WEBSITE: www.drapertools.com
PRODUCT HELPLINE: +44 (0) 23 8049 4344
GENERAL FAX: +44 (0) 23 8026 0784

1.3 UNDERSTANDING THIS MANUALS SAFETY CONTENT:

WARNING! Information that draws attention to the risk of injury or death.

CAUTION! Information that draws attention to the risk of damage to the product or surroundings.

1.4 COPYRIGHT © NOTICE:

Copyright © Draper Tools Limited.

Permission is granted to reproduce this publication for personal & educational use only. Commercial copying, redistribution, hiring or lending is prohibited.

No part of this publication may be stored in a retrieval system or transmitted in any other form or means without written permission from Draper Tools Limited.

In all cases this copyright notice must remain intact.

2. CONTENTS

2.1 CONTENTS

	PAGE CONTENT	PAGE
1	TITLE PAGE	
	1.1 INTRODUCTION	2
	1.2 REVISION HISTORY	2
	1.3 UNDERSTANDING THIS MANUAL	2
	1.4 COPYRIGHT NOTICE	2
2	CONTENTS	
	2.1 CONTENTS	3
3	GUARANTEE	
	3.1 GUARANTEE	4
4	INTRODUCTION	
	4.1 SCOPE	5
	4.2 SPECIFICATION	5
	4.3 HANDLING & STORAGE	5
5	HEALTH & SAFETY INFORMATION	
	5.1 GENERAL POWER TOOL SAFETY WARNINGS	6
	5.2 CONNECTION TO THE POWER SUPPLY	7A
6	TECHNICAL DESCRIPTION	
	6.1 IDENTIFICATION	8B
7	UNPACKING & CHECKING	
	7.1 PACKAGING.....	8A
	7.2 WHAT'S IN THE BOX	8A
8	PREPARING THE ROUTER	
	8.1 CHANGING THE ROUTER BASE.....	9
	8.2 DUST EXTRACTION PORT.....	9
	8.3 FITTING AND REPLACING ROUTER BITS.....	10
9	BASIC ROUTER OPERATIONS	
	9.1 ON/OFF SWITCH	11
	9.2 VARIABLE SPEED DIAL	11
	9.3 SETTING THE CUTTING DEPTH.....	12
	9.4 PARALLEL GUIDE ROUTING	13
	9.5 GUIDE BUSHES.....	13
	9.6 ROUTER TABLE	13
	9.7 EDGE FOLLOWER	14
	9.8 PIVOT ROD TRAMMEL	14
10	OPTIONAL ACCESSORIES.....	15
11	TROUBLESHOOTING.....	16
12	MAINTENANCE	17
13	EXPLANATION OF SYMBOLS	
	13.1 EXPLANATION OF SYMBOLS	18
14	DISPOSAL	
	14.1 DISPOSAL	19
	DECLARATION OF CONFORMITY	ENCLOSED

3. GUARANTEE

3.1 GUARANTEE

Draper tools have been carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship.

Should the tool develop a fault, please return the complete tool to your nearest distributor or contact Draper Tools Limited, Chandler's Ford, Eastleigh, Hampshire, SO53 1YF. England. Telephone Sales Desk: (023) 8049 4333 or Product Helpline (023) 8049 4344.

A proof of purchase must be provided with the tool.

If upon inspection it is found that the fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. This guarantee period covering parts/labour is 12 months from the date of purchase except where tools are hired out when the guarantee period is ninety days from the date of purchase. The guarantee is extended to 24 months for parts only. This guarantee does not apply to normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accidents, or repairs attempted or made by any personnel other than the authorised Draper warranty repair agent.

Note: If the tool is found not to be within the terms of warranty, repairs and carriage charges will be quoted and made accordingly.

This guarantee applies in lieu of any other guarantee expressed or implied and variations of its terms are not authorised.

Your Draper guarantee is not effective unless you can produce upon request a dated receipt or invoice to verify your proof of purchase within the guarantee period.

Please note that this guarantee is an additional benefit and does not affect your statutory rights.

Draper Tools Limited.

4. INTRODUCTION

4.1 SCOPE

Ideal for shaping woodwork, cabinetry, architrave, morticing and other associated routing work.

4.2 SPECIFICATION

Stock no.	53113
Part no.	MR1300
Rated voltage	230V~50Hz
Rated input	1300W
Collets	¼" (6.35mm) & ½" (12.7mm)
Cutter Capacity	30mm
Plunge Stroke:	
with Dust Extraction	0-45mm
without Dust Extraction	0-55mm
Speed (no load)	12,000-25,000r/min
Sound Pressure Level	92dB(A)
Sound Power Level	103dB(A)
Vibration Level	9.58m/s²
Weight (machine only)	4.3kg

4.3 HANDLING & STORAGE

Although this machine is small in size, care must still be taken when handling and lifting. Dropping this machine will have an effect on the accuracy and may also result in personal injury. This machine is not a toy and must be respected.

The environment will have a negative result on its operation if you are not careful. If the air is damp, components will rust. If the machine is unprotected from dust and debris; components will become clogged: And if not cleaned and maintained correctly or regularly the machine will not perform at its best.

5. HEALTH & SAFETY INFORMATION

5.1 GENERAL POWER TOOL SAFETY WARNINGS

WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.
- c) **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** Use of an RCD reduces the risk of electric shock.

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b) **Use personal protective equipment. Always wear eye protection.** Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) **Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.

- e) **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of these devices can reduce dust-related hazards.

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- b) **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) **Disconnect the plug from the power source and/or battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- f) **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

5) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

5. HEALTH & SAFETY INFORMATION

5.2 CONNECTION TO THE POWER SUPPLY

Make sure the power supply information on the machine's rating plate are compatible with the power supply you intend to connect it to.

This Router comes supplied with a UK standard 3 pin plug fitted. It is designed for connection to a domestic power supply rated at 230V AC.

It is a Class 2 machine (double insulated); is designed for connection to a power supply matching that detailed on the rating label and compatible with the plug fitted.

If an extension lead is required, use an approved and compatible lead rated for this appliance.

Follow all the instruction supplied with the extension lead.

This product requires no earth connection as supplementary insulation is applied to the basic insulation to protect against electric shock in the event of failure of the basic insulation.





Apart from replacing the fuse in the plug, no other electrical work is recommended on this Router.

1. Hold power tool by insulated gripping surfaces, when performing an operation where the cutting accessory may contact hidden wiring or its own cord. Cutting accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
2. Always wear a dust mask and ear protection when using this power tool.
3. Use only bits, which are designed for this router.
4. Use only sharp bits that are not chipped or cracked. Blunt bits will cause stalling.
5. Secure small pieces of wood firmly before working. Never hold them in your hand.
6. Danger. Keep hands away from the cutting area.
7. Secure the workpiece by means of the clamping equipment.
8. Before starting up, check that the bit is firmly positioned and secured into the collets.
9. The maximum indicated limit rotation speed of the milling bit must not be exceeded.
10. Routing must always be carried out against the direction of rotation (bit-rotation) of the bit.
11. The bit must be running at full speed before lowering into the work-piece.
12. When operating the machine, take great care and always hold the router handles firmly with both hands. Always provide for a secure footing when working.
13. Beware of the reaction torque of the machine, particularly if the bit becomes jammed in the workpiece.
14. On completion of work, allow the machine to slide back to its initial position by releasing the handle.
15. Make yourself familiar with your working area and be alert for possible hazards, which you might not hear due to machine noise.
16. Caution: Allow for run down time of bit after turning router off. Wait for the machine to come to a complete stop before removing from the work piece.
17. Never slow the router down with your hands.
18. Do not touch the bit immediately after operation; it may be extremely hot and could burn you.
19. Never stop the router by applying lateral pressure to the bit.
20. Do not force the router. Your router will do a better job if you take it slowly.
21. Avoid cutting nails and screws. Inspect timber and remove all nails and screws before cutting.
22. In the event of an electrical or mechanical malfunction, immediately switch off the saw and disconnect the power lead from the mains supply, and contact Draper for assistance.

Blank page

6. TECHNICAL DESCRIPTION

6.1 IDENTIFICATION

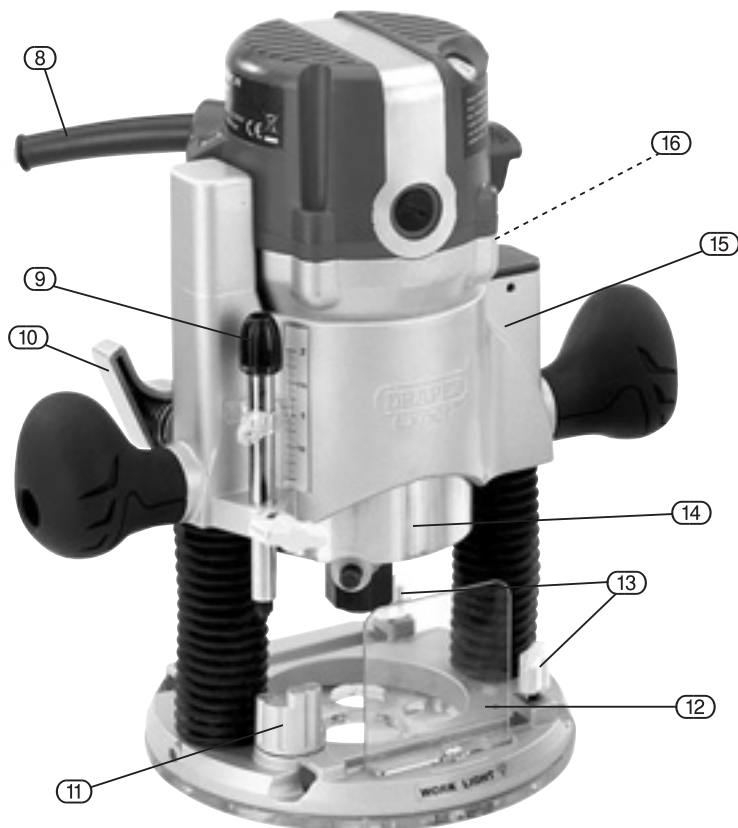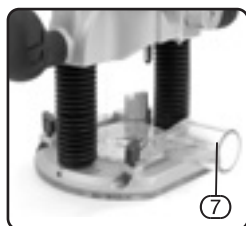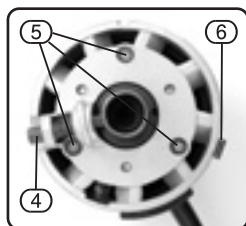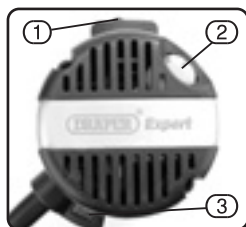

- | | |
|------------------------------------|---------------------------------|
| ① On/off switch. | ⑩ Plunge lock lever. |
| ② Variable speed dial. | ⑪ Turret. |
| ③ Power on indicator. | ⑫ Chip deflector. |
| ④ Spindle lock button. | ⑬ Parallel guide locking knobs. |
| ⑤ LED work lights. | ⑭ Motor unit. |
| ⑥ Height adjustment rack. | ⑮ Plunge base. |
| ⑦ Dust extraction port. | ⑯ Motor clamping lever. |
| ⑧ Approved moulded plug and cable. | |
| ⑨ Fine height adjustment. | |

7. UNPACKING & CHECKING

7.1 PACKAGING

Carefully remove the router from the packaging and examine it for any sign of damage that may have happened during shipping. Lay the contents out and check them against the parts shown below. If any part is damaged or missing; please contact the Draper Helpline (the telephone number appears on the Title page) and do not attempt to use the product.


The packaging material should be retained at least during the guarantee period: in case the machine needs to be returned for repair.

Warning! Some of the packaging materials used may be harmful to children. Do not leave any of these materials in the reach of children.

If any of the packaging is to be thrown away, make sure they are disposed of correctly; according to local regulations.

7.2 WHAT'S IN THE BOX?

As well as the router; there are several parts not fitted or attached to it.

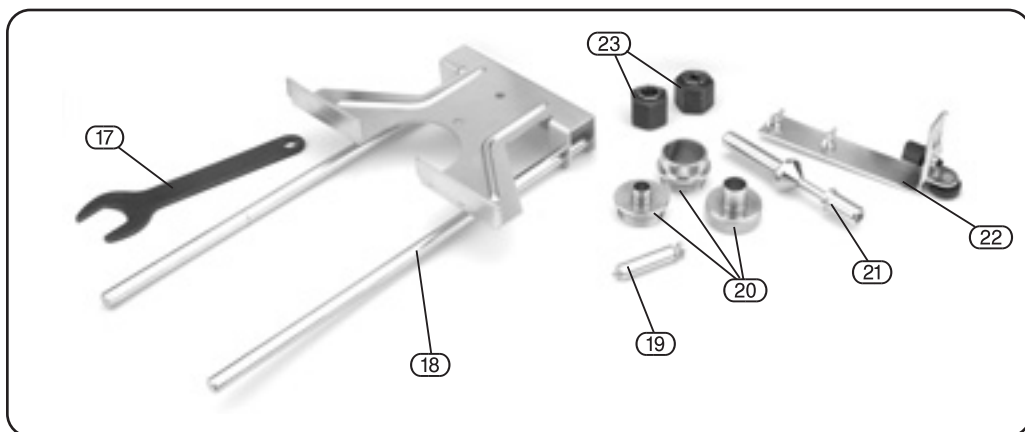

- (17) Spanner.
- (18) Parallel guide.
- (19) Trammel.
- (20) Guide bushes (11.1, 16 and 30mm).
- (21) Centring pin.
- (22) Edge follower.
- (23) Collets.

8 PREPARING THE ROUTER

NOTE: Remove the plug from socket before carrying out adjustment, servicing or maintenance.

This Router can be fitted with a fixed router base available separately (Stock No.53114).

This router is supplied with the plunge base fitted.


8.1 CHANGING THE ROUTER BASE - FIG. 1

Open motor clamping lever (16) on the base.

Insert the motor unit ensuring alignment of rack (14.1) and recess (15.5).

Fully insert the motor unit and close clamping lever to lock.

NOTE: The vertical position of the motor in the plunge base can be adjusted for different cutter types/lengths. Release the clamping lever and adjust the motor position as required.

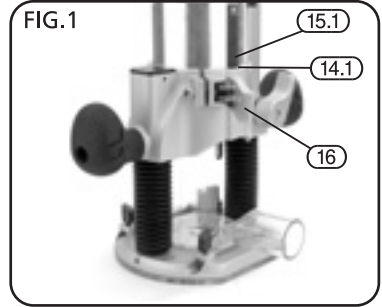

8.2 DUST EXTRACTION PORT - FIG. 2

The majority of operations will require the dust extraction port to be fitted. However, some operations will be impossible with the port fitted. In these circumstances, appropriate safety equipment should be worn.

Fit the dust extraction port (7) to the plunge base aligning tabs (7.1) with the threaded screw holes.

Secure with two cross head machine screws (7.2).

Do not overtighten as this may damage the port.


NOTE: With the dust extraction port fitted, the plunge stroke is reduced to 45mm.

DUST

Inhalation of dust particles can be detrimental to health. This dust outlet must be connected with a dust extraction machine.

NOTE: Due to the outlet diameter, a size adaption may be necessary.

All wood dust (including dust from composites like chipboards and fibre boards etc) is hazardous to health; it can affect the nose, the respiratory system and the skin. For example MDF (medium density fibreboard) which contains formaldehyde is a known carcinogen. In addition to the above measures a correctly fitted dust mask, suitable for the activity and in accordance to the relevant standard, must be worn. For work activities involving exposure to fine wood dust, a mask rated at least FFP2 should be used.

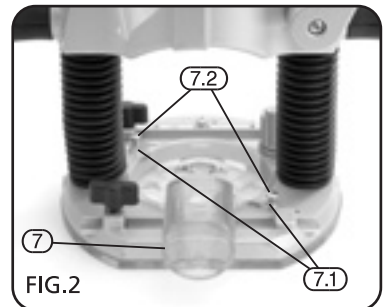

8 PREPARING THE ROUTER

8.3 FITTING AND REPLACING ROUTER BITS - FIG. 3

This router is designed for use with ¼" (6.35mm) and ½" (12.7mm) shank router bits only.

WARNING: Only use bits of the correct shank diameter suitable for the speed of the tool. Selection of the correct router bit, suitable for the intended application is vital. Seek guidance if uncertain of selection.

Select the correct size collet for the router bit shank. If the shank size is not known, insert the bit into the collet. If the collet does not offer a machine fit, do not use the bit. Do not force an ill fitting bit into the collet.

Insert the router bit shank into the collet (23).

Press and hold spindle lock button (4) and engage the lock pin.

Carefully thread the collet nut onto the spindle until hand tight.

NOTE: Fully insert the router bit into the collet but ensure that the shank does not contact the bottom of the motor spindle. This will cause vibration which can loosen the cutter and give a poor cut.

Tighten the collet nut using the spanner supplied.


NOTE: Tighten the collet firmly but not aggressively. A collet that requires excessive tightening should be replaced.

For larger diameter router bits it may be necessary to fit the motor unit into a router base before fitting the router bit.

WARNING: Take care when handling the cutter bits as they are extremely sharp.

Do not tighten the collet, even hand tight with no router bit fitted; this can cause metal fatigue or distortion to the collet.

When cutting is complete, ensure the router bit is removed. Failure to do so can cause the collet to corrode or suffer metal fatigue or distortion.

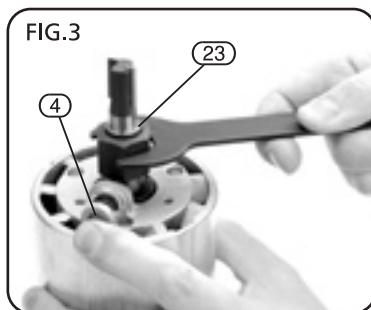

9. BASIC ROUTER OPERATIONS

NOTE: Remove the plug from the socket before carrying out adjustment, servicing or maintenance.

9.1 ON/OFF SWITCH - FIG. 4

The router is fitted with a toggle type on/off switch. To start the router, position the toggle switch ① to the 'ON' position. To stop the router, position the toggle switch to 'OFF'.

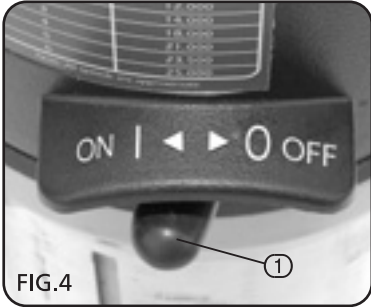


FIG.4

9.2 VARIABLE SPEED DIAL - FIG. 5

The variable speed dial ② is marked 1-6 and correspond:

SETTING	APPROX.SPEED (r/min)
1	12,000
2	14,000
3	18,000
4	21,500
5	23,500
6	25,000

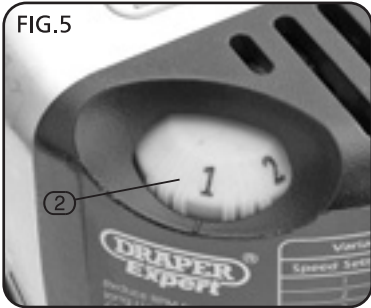


FIG.5

NOTE: Cutting speed depends on material, cutter size and cutting depth etc. Larger router bits will require a slower speed. For more detailed information refer to a routing/woodwork book.

NOTE: After long periods of use at low speed, allow the machine to cool by running at full speed with no load for three minutes.

9. BASIC ROUTER OPERATIONS

9.3 SETTING THE CUTTER DEPTH - FIGS. 6 - 7

With a suitable router bit fitted place the router on to the workpiece.

Rotate the turret (11) to the lowest position. Slowly plunge the router until the bit just touches the workpiece. Lock the router in this position with the plunge lock lever.

Ensure the height adjustment lock (9.3) is not too tight and lower the rod (9.1) until it touches the turret. If necessary turn the fine height adjustment control (9) to align the nearest digit on the scale against the pointer (9.2).

Take note of the setting before raising the rod upward to set the plunge depth (the difference between the two measurements) and securely tighten the height adjustment lock (9.2). e.g. scale reads 23. After adjustment reads 33, the plunge depth will be 10mm. Release the plunge lock lever and raise the router back to full height. Rotate the turret round several positions and the router is set up ready to begin work.



When beginning to cut, plunge the cutter slowly to the first depth and proceed to cut. Take a second pass at the next step down on the turret and continue until the full depth is achieved.

If, after the full depth has been routed, further material removal is necessary lock the router in the plunged position. Rotate the fine adjustment control (9). Turning the fine adjustment (9) anti-clockwise will increase the plunge depth. One complete turn is equivalent to 1mm plunge depth. Once set take another pass along the cut.

Regulate the depth of the cut and speed of feed to ensure no strain is put on to the cutter or motor, however if the speed is too slow, burn marks may appear on the workpiece.

NOTE: The direction of rotation is marked on the front of the base casting. Travelling along a workpiece in the wrong direction will cause the bit to pull and bounce, leading to a poor finish and possible damage.

NOTE: Remove the plug from the socket before carrying out adjustment, servicing or maintenance.

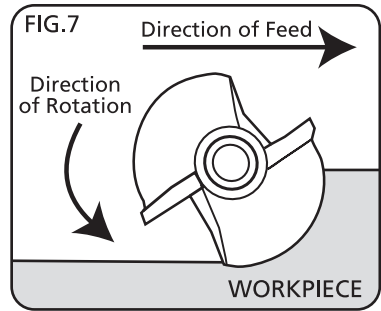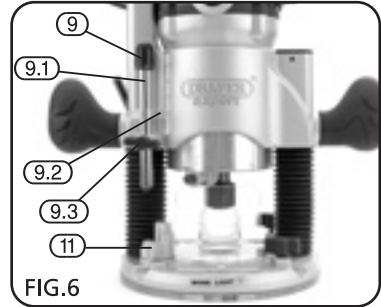

9. BASIC ROUTER OPERATIONS

9.4 PARALLEL GUIDE ROUTING - FIG. 8

Ensure the edge along which the guide is going to travel is smooth and true as any inconsistencies will translate into the cut.

Pass the parallel guide rods through the four points in the router's base and secure in place with lock knobs

(13).

When using the parallel guide an even pressure should be applied to each face except on a leading/trailing edge of a workpiece. When leading on to a workpiece apply the pressure to the forward face until both faces are on. When trailing off a workpiece apply the pressure to the rear face until the cut is complete.

9.5 GUIDE BUSHES - FIG. 9

For detailed information on guide bush routing, refer to a routing/woodworking book.

Insert the threaded part of the guide bush (20) through the base plate, secure using the knurled ring (14.2).

9.6 CENTRING THE PLUNGE BASE - FIG. 10

Centring the base is important to ensure accuracy when using jigs or templates.

Fit a suitable guide bush and install the required collet size.

NOTE: Only the 11.1mm and 16mm bush will be suitable for centring.

Plunge the base to stop and lock with the plunge lock lever.

Loosen the three screws (15.2) by approx 2 turns to allow the base plate to move freely.

Insert the centring pin (21) into the collet and bush; hand tighten the collet nut.

NOTE: If using a ½" collet, use adaptor (23).

Align the centring pin and guide bush to each other by moving the base plate as required.

Tighten the base screws.

Remove centring pin.

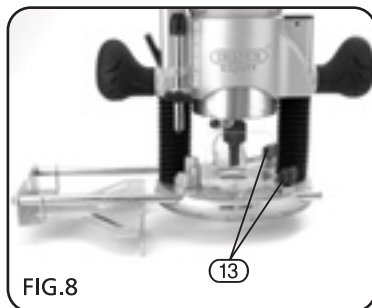


FIG.8

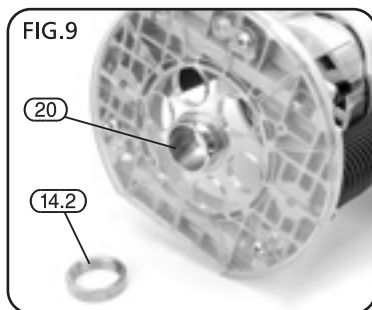


FIG.9

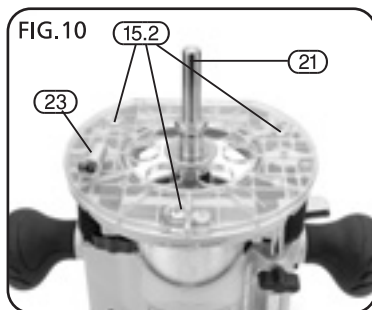


FIG.10

9. BASIC ROUTER OPERATIONS

9.7 *EDGE FOLLOWER - FIG. 11*

When an edge is curved, use the edge follower (22). Attach the edge follower to the parallel guide using machine screws and wing nuts supplied.

Adjust the height to suit the workpiece with the thumb wheel (22.1).

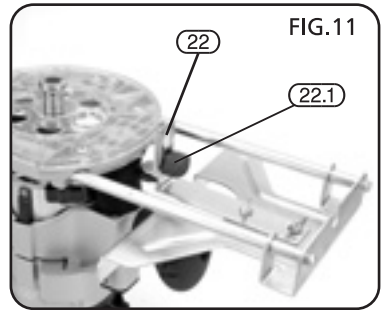


FIG.11

9.8 *PIVOT ROD TRAMMEL - FIG. 12*

Invert the parallel guide in the router base.

Fix the trammel (19) on the parallel guide using the wing bolt supplied.

Adjust the distance between the router bit and pivot point as required.

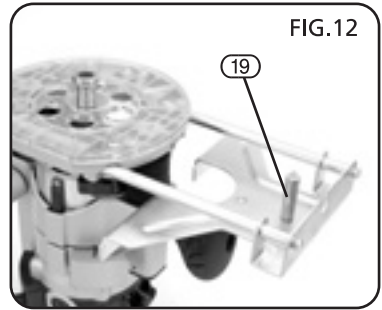


FIG.12

10. OPTIONAL ACCESSORIES

Stock No.	Part No.	Shank Size	Description
72892	DRB12A	¼"	12 PIECE ROUTER BIT SET
72893	DRB12B	½"	12 PIECE ROUTER BIT SET
75330	RB1	¼"	ROUTER BIT 3 x 11mm STRAIGHT
75331	RB2	¼"	ROUTER BIT 6.35 x 25mm STRAIGHT
75332	RB3	¼"	ROUTER BIT 9.5 x 25mm STRAIGHT
75333	RB4	¼"	ROUTER BIT 10 x 25mm STRAIGHT
75334	RB5	¼"	ROUTER BIT 12.7 x 25mm STRAIGHT
75335	RB6	¼"	ROUTER BIT 12.7 x 25mm FLUSH
75336	RB7	¼"	ROUTER BIT 12.7 x 90° GROOVING TWIN FLUTE
75337	RB8	¼"	ROUTER BIT 19mm x 90° GROOVING TWIN FLUTE
75338	RB9	¼"	ROUTER BIT 35 x 17mm ROMAN OGEE TWIN FLUTE
75339	RB10	¼"	ROUTER BIT 38 x 20mm BEADING TWIN FLUTE
75340	RB11	¼"	ROUTER BIT 30mm x 45° CHAMFER TWIN FLUTE
75341	RB12	¼"	ROUTER BIT 25 x 7mm RADIUS ROUNDING TWIN FLUTE
75342	RB13	¼"	ROUTER BIT 32 x 9mm RADIUS ROUNDING TWIN FLUTE
75343	RB14	¼"	ROUTER BIT 38 x 14mm ROUNDING TWIN FLUTE
75344	RB15	¼"	ROUTER BIT 32 x 12mm REBATING TWIN FLUTE
75345	RB16	¼"	ROUTER BIT 12.7 x 6.35mm RADIUS CORE TWIN FLUTE
75346	RB17	¼"	ROUTER BIT 14mm DIAMETER DOVETAIL
75347	RB18	¼"	ROUTER BIT NO.10 BISCUIT
75348	RB19	¼"	ROUTER BIT NO.20 BISCUIT
75349	RB20	½"	ROUTER BIT 12.7 x 25mm STRAIGHT TWIN FLUTE
75350	RB21	½"	ROUTER BIT 12.7 x 50mm STRAIGHT TWIN FLUTE
75351	RB22	½"	ROUTER BIT 19 x 25mm STRAIGHT TWIN FLUTE
75352	RB23	½"	ROUTER BIT 12.7 x 50mm FLUSH
75353	RB24	½"	ROUTER BIT NO.10 BISCUIT
75362	RB25	½"	ROUTER BIT NO.20 BISCUIT

11. TROUBLESHOOTING

NOTE: Remove the plug from the socket before carrying out adjustment, servicing or maintenance.

PROBLEM	POSSIBLE CAUSE	REMEDY
Motor does not start	1. Fuse	1. Replace/reset time delay fuse or circuit breaker
	2. Brushes worn	2. Have brushes replaced by authorised service agent
	3. Other	3. Return to authorised service agent
Machine vibrates	1. Router bit not suitable for application	1. Seek guidance on bit selection
	2. Router bit blunt	2. Stop machine. When stopped, replace with a sharp bit
	3. Incorrect direction of travel	3. Change direction of travel
Bit will not cut	1. Attempting to remove excess material	1. Reduce plunge depth
	2. Router bit blunt	2. Stop machine. When stopped, replace with a sharp bit
	3. Incorrect direction of travel	3. Change direction of travel

12. MAINTENANCE

Regular inspection and cleaning reduces the necessity for maintenance operations and will keep your tool in good working condition.

The motor must be correctly ventilated during tool operation. For this reason avoid blocking the air inlets. After use disconnect the tool from the power supply and vacuum the ventilation slots.

If the replacement of the supply cord is necessary, this has to be done by the manufacturer or his agent in order to avoid a safety hazard.

Remove the plug from the socket before carrying out adjustment, servicing or maintenance.

13. EXPLANATION OF SYMBOLS

12.1 EXPLANATION OF SYMBOLS



Warning!
Wear dust mask.



Warning!
Read the instruction manual



Warning!
Wear goggles.



Warning!
Wear ear defenders.



WEEE
Do not dispose of Waste Electrical
& Electronic Equipment in with
domestic rubbish



Class II construction
(Double insulated).

14. DISPOSAL

14.1 DISPOSAL

- At the end of the machine's working life, or when it can no longer be repaired, ensure that it is disposed of according to national regulations.
- Contact your local authority for details of collection schemes in your area.

In all circumstances:

- Do not dispose of power tools with domestic waste.
- Do not incinerate.
- Do not abandon in the environment.
- Do not dispose of WEEE* as unsorted municipal waste.



* Waste Electrical & Electronic Equipment.



CONTACTS

- **DRAPER TOOLS LIMITED,**
Hursley Road, Chandler's Ford,
Eastleigh, Hampshire. SO53 1YF. U.K.
- **Helpline:** (023) 8049 4344
- **Sales Desk:** (023) 8049 4333
- **Internet:** www.drapertools.com
- **E-mail:** sales@drapertools.com
- **Sales Fax:** (023) 8049 4209
- **General Enquiries:** (023) 8026 6355
- **Service/Warranty Repair Agent**
For aftersales servicing or warranty repairs, please
contact the Draper Tools Helpline for details of an
agent in your local area.

YOUR DRAPER STOCKIST